


E350 Signal Flow (Normal Mode)

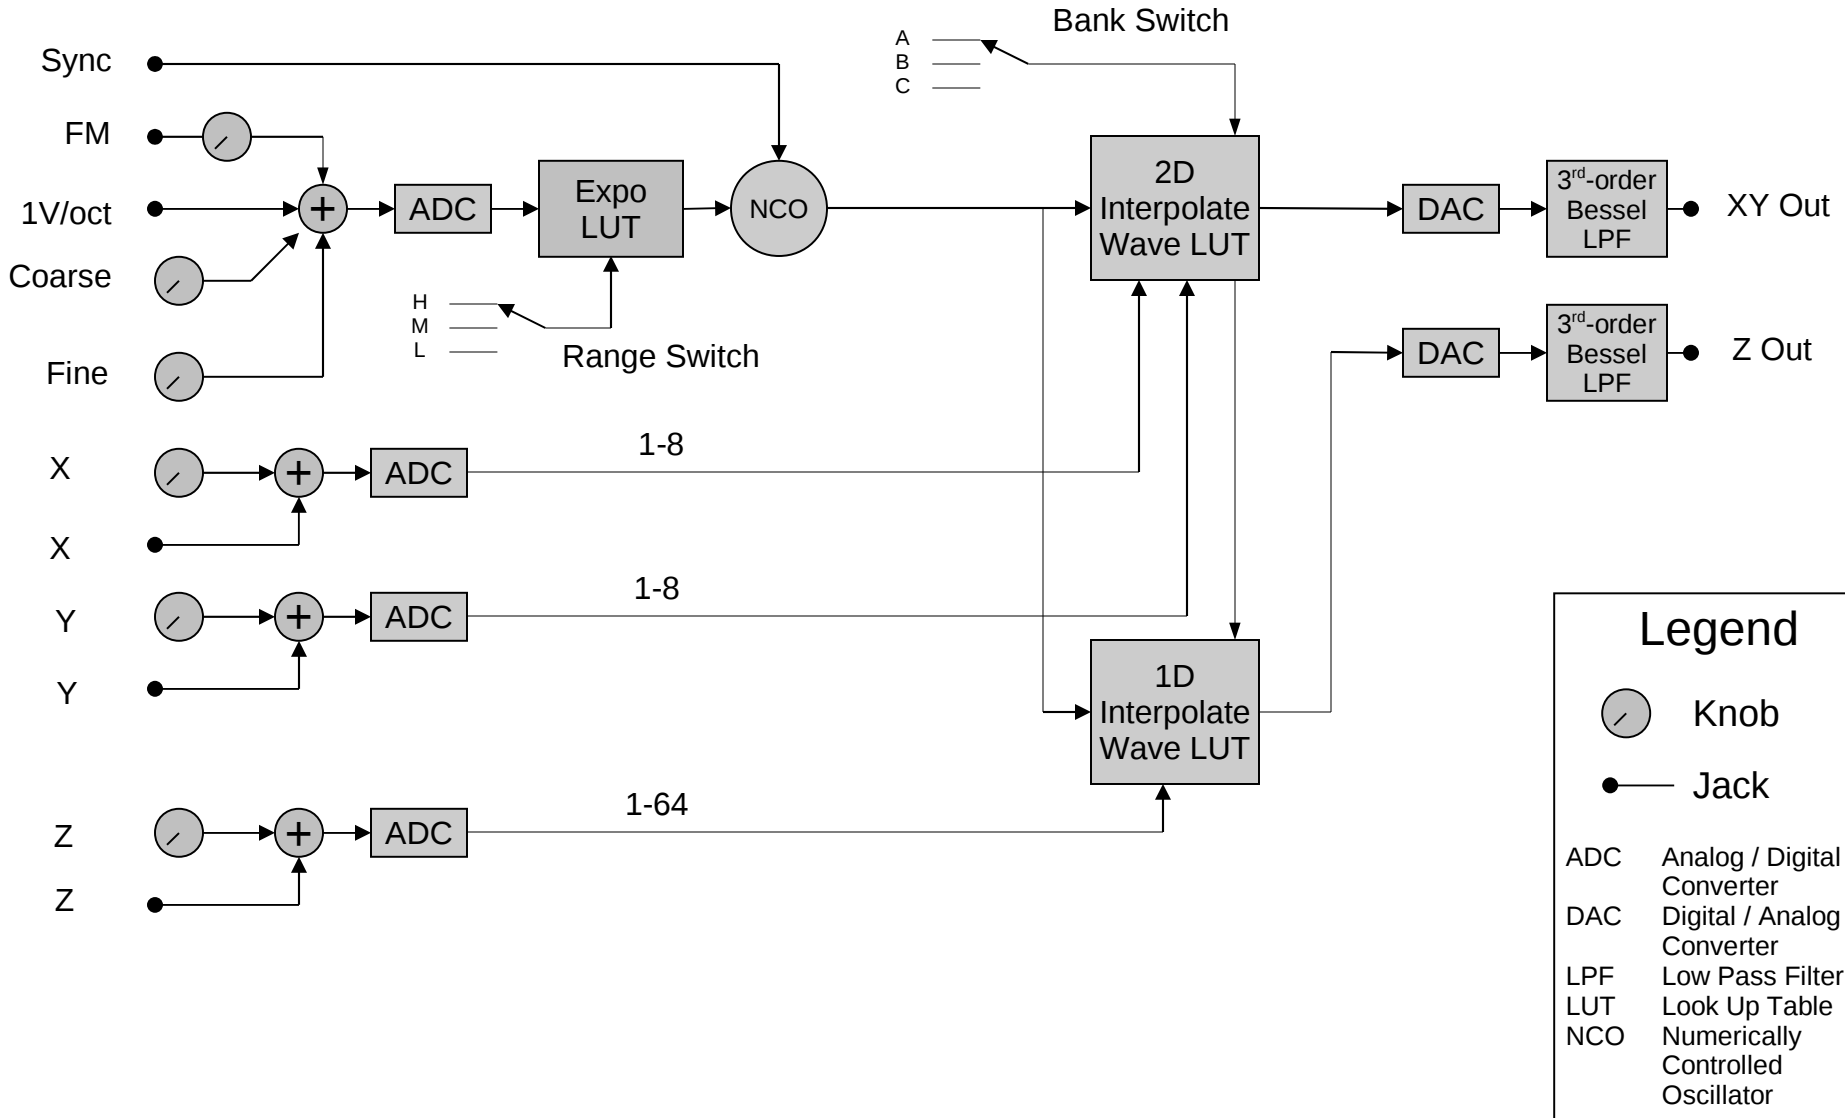

E350 Signal Flow (Phase Mode)

